

ANILOX ROLL QUALITY CONTROL REPORT

Customer:

Your reference:

Our reference: **Date:**

Ink system: Doctor blade chamber Rubber roll

Type of anilox roll: Ceramic coated Hard chrome plated

Nominal volume: Cm^3/m^2 **Screen:** **L/CM**

Screen type: Hexagonal Diamant Hex long GTT Hashure

Screen angle: 30° 45° 60° 75° 90°

Screen condition: Excellent Good Fair Poor Extremely bad


Remarks: Scorelines metal calcium damages undercorrosion

Body length: mm

Volume before cleaning: Cm^3/m^2 **after cleaning:** Cm^3/m^2

Roll Information, before cleaning.

Cell Info: **Opening:** μm **Wall:** μm **Depth:** μm

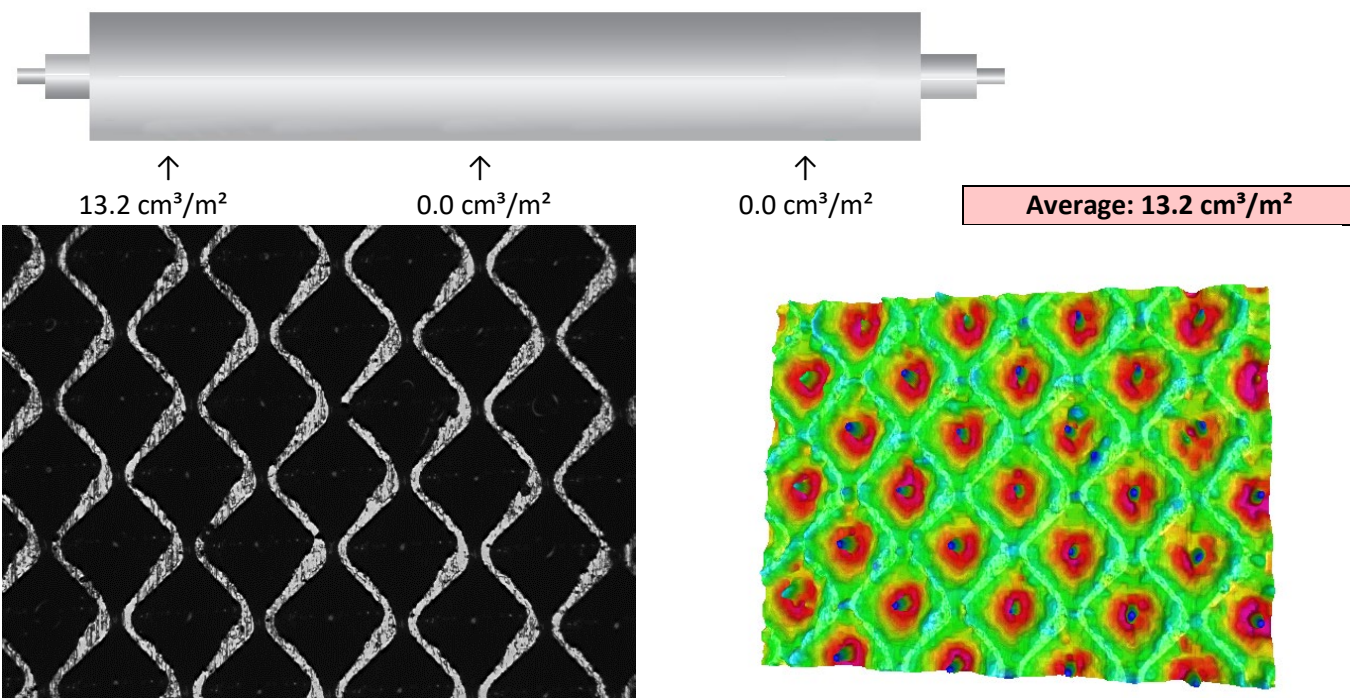

Roll Information, after cleaning.

Cell Info: Opening: μm Wall: μm Depth: μm




↑
18.3 cm^3/m^2

↑
0.0 cm^3/m^2

↑
0.0 cm^3/m^2

Average: 18.3 cm^3/m^2
(38.6%)

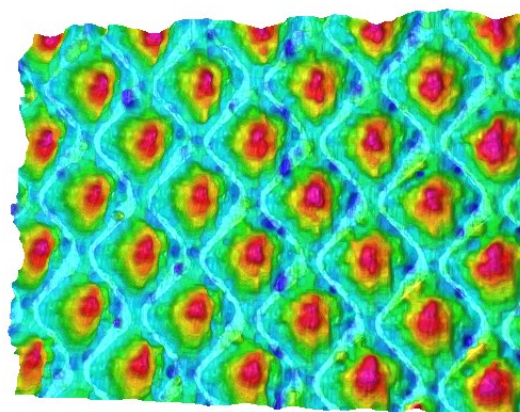

Advise for renewal months: < 3 < 6 12 > 12 no need

Advise Cleaning Liquid: **BIOCLEAN GLUEROLL CLEANER**

Extra action needed: **CLEAN MINIMUM 4 x per year to avoid damages to cell walls!!! Lot of scratches and small damages!**

- Monitoring each month / Doctor Blade chamber check / Calcium treatment / Emergency kit
 Magnet and filter to prevent score lines / heating tank treatment / worn check by AniCAM

Report made by: *Niels Gerrits*

For more information, please contact us:



BicarBlast B.V.
Sigarenmaker 2
5521 DJ Eersel
The Netherlands

Phone: +31 (0)497 330032
Fax: +31 (0)497 330344
E-mail: info@bicarblast.com